

Meter Elevation Code Setup

Last Modified on 05/24/2022 12:56 pm EDT

The system uses Meter Elevation Codes in meter billing. The Meter Elevation Code is used to set the elevation the meter is located. The Meter Elevation Code is tied to the customer on the *Meter Information* window. The Meter Elevation Code is used to generate adjusted meter billings based on elevation (altitude). The Adjustment Factor is multiplied by the meter consumption to calculate an adjusted reading. The *Meter Elevation Code* file cannot be changed or modified.

The Meter Elevation Codes are found at *Main Menu / Supervisor / Maintenance Menu / Maintenance Files Menu / Meter Elevation Code*.

Meter Elevation Codes

Elevation Code	From Elevation	To Elevation	Adjustment Factor
1	400	950	1.00
2	950	1550	0.98
3	1550	2100	0.96
4	2100	2700	0.94
5	2700	3300	0.92
6	3300	3950	0.90
7	3950	4550	0.88
8	4550	5200	0.86
9	5200	5850	0.84
10	5850	6500	0.82
11	6500	7200	0.80

12	7200	7900	0.78
13	7900	8600	0.76
14	8600	9350	0.74
15	9350	10100	0.72
16	10100	10850	0.70
17	10850	11650	0.68
18	11650	12450	0.66
19	12450	13250	0.64
20	13250	14100	0.62
21	14100	14950	0.60
22	-150	400	1.02